YASHICA

FX-3 SUPER

ASSEMBLING CHART

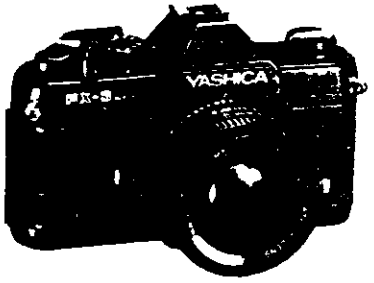

KYOCERA CORPORATION
YASHICA DIVISION JAPAN

84-11-01

NO. 1

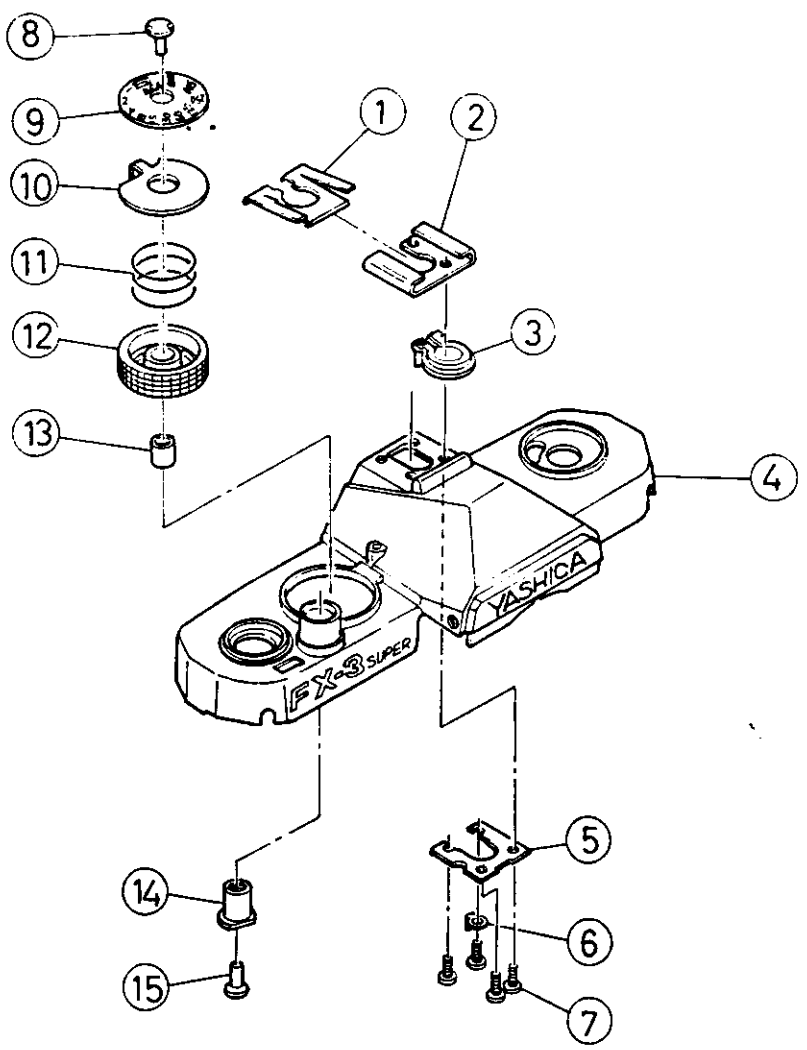

	PARTS NO.	DESCRIPTION	QTY
1	159 178	SHOE PLATE SPRING(FX-3 SUPER)	1
1	153 128	SHOE PLATE SPRING(FX-7 SUPER)	1
2	153 122	ACCESSORY SHOE	1
3	067 165-S	SHOE CONTACT ASS'Y	1
4	066 910-S	TOP COVER ASS'Y(FX-3 SUPER)	1
4	069 910-S	TOP COVER ASS'Y(FX-7 SUPER)	1
5	164 151	SHOE REINFORCEMENT PLATE	1
6	147 163	SHOE LUG PLATE	1
7	61912822	SHOE REINFORCEMENT PLATE S.S	4
8	147 443	NAME PLATE S.S	1
9	147 415	SHUTTER DIAL NAME PLATE	1
10	164 414	ISO NAME PLATE	1
11	147 416	ASA SPRING	1
12	147 418	SHUTTER DIAL	1
13	147 409	ASA COLLAR	1
14	164 419	SHUTTER BUTTON(FX-3 SUPER)	1
14	165 444	SHUTTER BUTTON(FX-7 SUPER)	1
15	164 422	SHUTTER BUTTON SHAFT	1

NOTE: EXCEPT THE ABOVE MENTIONED PARTS USE THE PARTS NUMBER FX-3, FX-7 OF THE ASSEMBLING CHART.

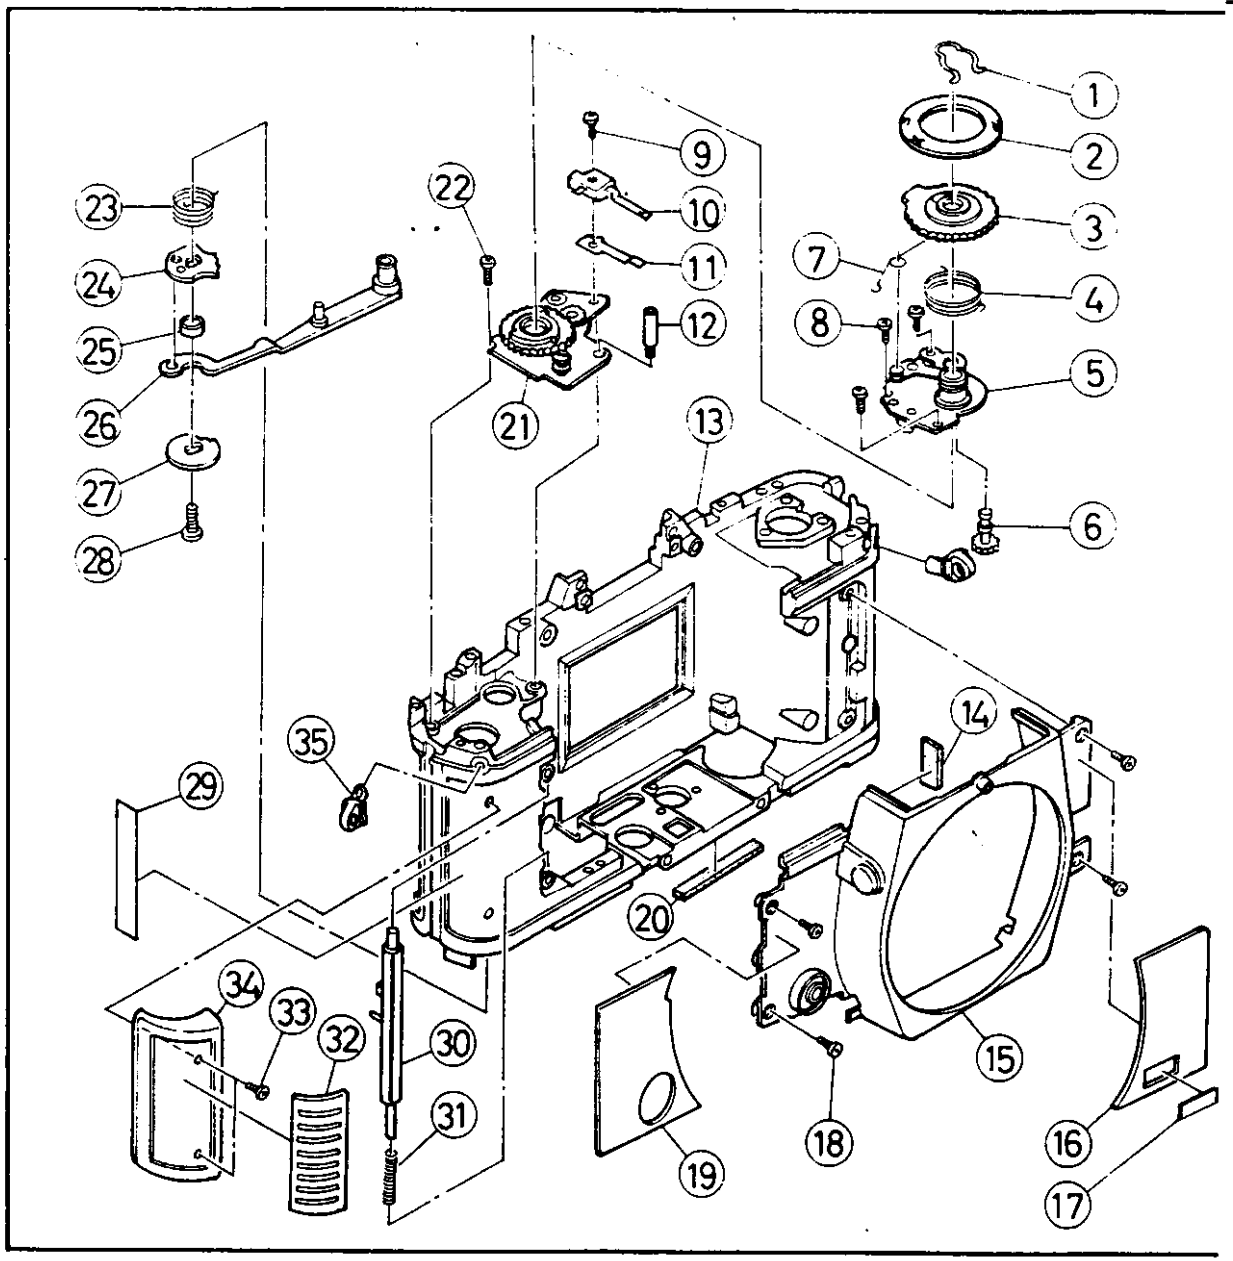

	PARTS NO.	DESCRIPTION	Q'TY
1	147 871	COUNTER CLAMP	1
2	147 864	COUNTER NAME PLATE	1
3	147 86520	COUNTER GEAR	1
4	147 86710	COUNTER SPRING	1
5	#	COUNTER BASE PLATE	1
6	147 863	COUNTER GEAR(1)	1
7	147 870	COUNTER REVERSE LEVER SPRING	1
8	61913026	COUNTER BASE PLATE S.S	3
9	63915526	EC SWITCH S.S	1
10	066 675-S	EC SWITCH ASS'Y	1
11	164 452	EC CONTACT(2)	1
12	147 620	SHUTTER BASE PLATE POST	1
13	#	BODY	1
14	148 164	TOP COVER MOQUETTE	1
15	066 940	MOUNT COVER SUB ASS'Y	1
16	164 115	FRONT COVER(RIGHT)	1
17	360 330	KYOCERA NAME PLATE	1
18	63913026	MOUNT COVER S.S	4
19	164 116	FRONT COVER(LEFT)	1
20	137 841	M. MOQUETTE	1
21	066 200	WINDING BASE PLATE ASS'Y	1
22	61713026	WINDING BASE PLATE S.S	1
23	147 632	WINDING SPRING	1
24	066 617	SET CAM PLATE ASS'Y	1
25	147 671	SET CAM RING	1
26	066 717	SM SET LEVER ASS'Y	1
27	147 61022	SET CAM FIXER	1
28	66001037	SET CAM FIXER S.S	1
29	164 107	GRIP TAPE	1
30	164 422	SHUTTER SHAFT	1
31	147 423	SHUTTER SHAFT SPRING	1
32	164 106	GRIP COVER	1
33	61916526	GRIP S.S	2
34	164 105	GRIP	1
35	152 104	STRAP HOLDER	2
1,3-5	066 830	COUNTER BASE PLATE ASS'Y	1

NOTE: EXCEPT THE ABOVE MENTIONED PARTS USE THE PARTS NUMBER FX-3,FX-7 OF THE ASSEMBLING CHART.

PARTS MARKED # ARE NOT AVAILABLE

NO 3

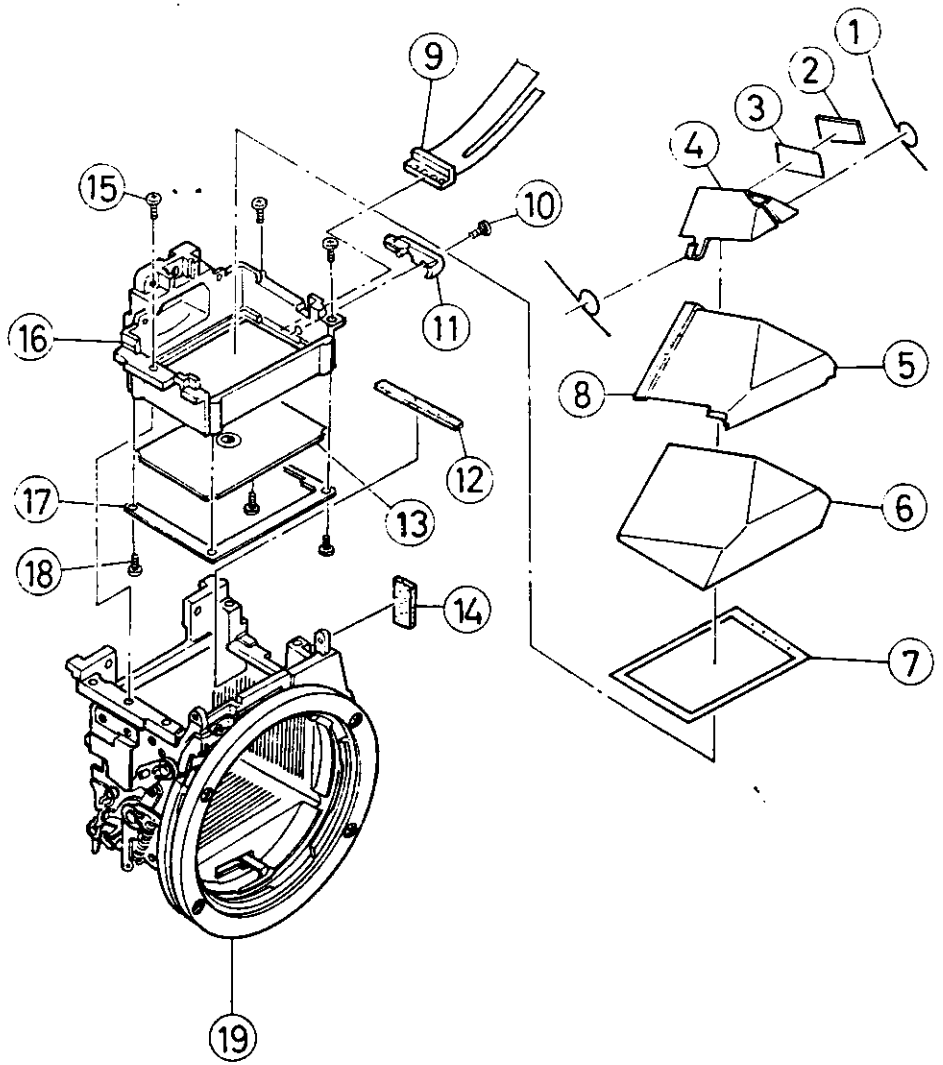

	PARTS NO.	DESCRIPTION	
1	147 836	PENTA PRISM FIXER SPRING	2
2	164 505	RELAY BASE	1
3	*	DOUBLE COATED TAPE	1
4	139 862	PENTA PRISM FIXER	1
5	147 837	PENTA CAP	1
6	147 838	PENTA PRISM	1
7	164 841	FINDER MASK FRAME	1
8	147 881	PENTA DUST-PROOF MOQUETTE	1
9	164 504	LED W/FPC	1
10	69103566	LED FIXER S.S	1
11	164 842	LED FIXER	1
12	137 841	M. MOQUETTE	1
13	147 839	FOCUSING GLASS	1
14	148 164	TOP COVER MOQUETTE	1
15	61914026	PENTA PRISM HOLDER S.S	3
16	147 835	PENTA PRISM HOLDER	1
17	147 840	FOCUSING GLASS FIXER	1
18	69103566	FOCUSING GLASS FIXER S.S	4
19	066 751	MIRROR BOX ASS'Y	1

NOTE: EXCEPT THE ABOVE MENTIONED PARTS USE THE PARTS NUMBER FX-3,FX-7 OF THE ASSEMBLING CHART.

PARTS MARKED * ARE NOT AVAILABLE